




Video Boombox  
**User Manual**

WinBook

**Read these instructions included in this User Manual thoroughly prior to connecting and operating. Please retain this manual in case you may need it for future reference.**


**The illustrations and graphics shows are for reference only and subject to change without notice.**

# Video Boombox Overview

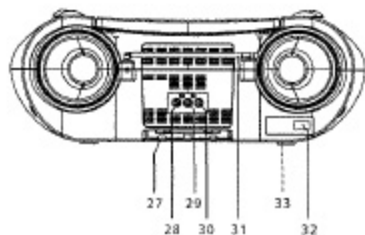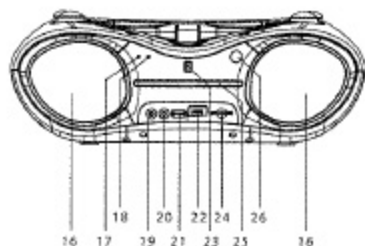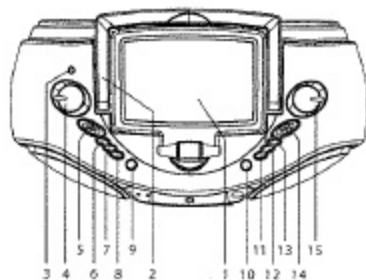

- |                                   |                                 |
|-----------------------------------|---------------------------------|
| 1. TFT Display                    | 18. FM Station Indicator        |
| 2. Handle                         | 19. Audio In Jack               |
| 3. Phone Jack                     | 20. MIC Jack                    |
| 4. Volume Control                 | 21. MIC Level Control           |
| 5. Function Switch                | 22. USB Port                    |
| 6. Menu Button                    | 23. Open/Close Button           |
| 7. Repeat Button                  | 24. SD/MMC Card Slot            |
| 8. Audio Button                   | 25. Disc Tray                   |
| 9. Display Button                 | 26. Remote Sensor               |
| 10. Stop & USB/SD/MMC Card Button | 27. Battery Compartment         |
| 11. Skip/Search Down Button       | 28. Video Jack                  |
| 12. Skip/Search Up Button         | 29. Audio Out Right Jack        |
| 13. Play/Pause Button             | 30. Audio Out Left Jack         |
| 14. Band Switch                   | 31. Telescopic FM Antenna       |
| 15. Tuning Control                | 32. AC Socket                   |
| 16. Speakers                      | 33. Voltage Selector (optional) |
| 17. Power Indicator               |                                 |

## Remote Control Functions

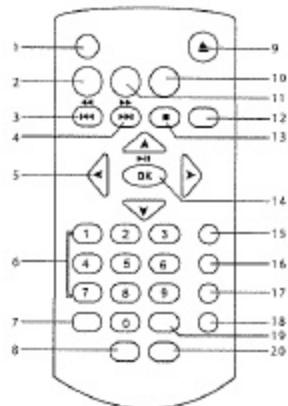

1. Screen On/Off & Color/Brightness Button
2. Title Button
3. PREV/F.BWD Button
4. NEXT/F.FWD Button
5. Navigation Buttons
6. Numeric Buttons
7. Program/Angle Button
8. Mute Button
9. Open/Close Button
10. Setup Button
11. Menu (PBC) Button
12. Display Button
13. Stop Button
14. Ok (Play/Pause) Button
15. Subtitle Button
16. Audio Button
17. Search Button
18. Repeat Button
19. Zoom/Slow Button
20. USB/Card Button

## Basic Connection

We recommend the Boombox be connected to a multi-system TV. Ensure that this player and other equipment to be connected to the unit are in the standby or off mode and disconnect the power cords before connecting.

Do not block ventilation holes of any piece of the equipment and arrange them so that air can circulate freely.

Read through the instructions before connecting other equipment.


Ensure that you observe the color code when connecting audio and video cables.

**Note:** During DVD play, the TV volume may be at a lower level than during TV broadcasts, etc. If this is the case, adjust the volume to the desired level.

If the DVD/CD player is connected to the TV through a VCR, the picture may not be played back normally with some DVDs. If this is the case, do not connect the player via the VCR.

### Connecting to a TV

Power on the TV set and select video input mode.

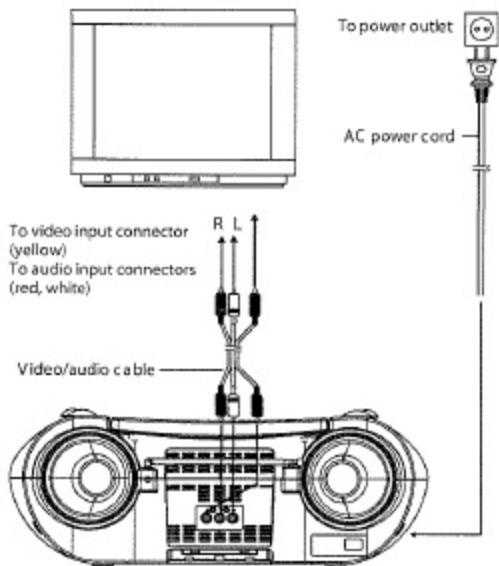

## Getting Started

1. Turn on the player and slide the function switch to the DVD/USB/Card position.
2. Press disc Open/Close button on the front of main unit to Open the disc tray and lift the TFT screen to face you.
3. Place a disc onto the disc tray.
4. Press Open/Close button to close the disc tray and the playback starts automatically.
5. When a menu screen appears on the TV, move the navigation buttons or press the numeric buttons to select a preferred track number, then press Ok (Play/Pause) button to start playback.

### Adjusting the Volume

Rotate the Volume Control button to increase or reduce the volume.

### Mute

Press the Mute button and the audio output of the main unit will be shut off. Press this button again or the Volume button to resume the audio output.

### Skip Ahead or Back

Press the Next Skip or Prev Skip button once during play to skip a chapter (DVD) or a track (CD) ahead or backwards.

### Rapid Advance/Reverse

During playback, press and hold F.FWD button or F.BWD button several times to scan the disc forward or backward at X2, X4, X8, X20 speed. Press the Play button to resume normal play.

### Play/Pause

During playback, press the Play/Pause button to pause. To resume normal play, press the Play/Pause button again.

### Stop Playback

Press the Stop button during playback to stop playback. The player activates its resume function when Stop is pressed in Stop mode. Press the Play button again. Playback resumes at the point it stopped previously. Open the disc tray or press the Stop button one more time to clear the resume function.

### Slow-Motion Play (DVD)

Press and hold the Slow button on the remote control during playback. The disc will be played at 1/2 normal speed at first. Each time this button is pressed, the play speed becomes slower (down to 1/7 normal speed). Press the Play button and normal play will resume.

### Repeat

Press the Repeat button during play. It will repeat play one chapter/title or repeat all (for DVD disc), repeat play a track or all tracks (for CD) or repeat the sections between two specific points (A-B).

### **Search for a Preferred Scene**

1. Press the Search button during play and highlight the item to be played (Title, Chapter or Chapter time) by one of the navigation buttons.
2. Input the desired number or time via the numeric buttons.
3. Press the Ok button to confirm and the playback from the located scene starts.
4. To exit search menu, press the Search button directly.

### **Program Play (up to 16 Photos)**

The player plays the tracks on the disc in an order you desire.

1. Press Program during playback to display the program menu.
2. Select location(s) to be memorized via one of the navigation buttons and then enter the desired Titles/Chapters numbers using the numeric buttons.

**Note:** Leading with zero is not necessary. If the track number is more than 10, press the first unit digit and then another unit digit. Some keys may not be needed since there will be more than the title/chapter/track numbers on the current disc.

Example: Track 3, press "3"

Track 12, press "1" and then "2"

Track 21, press "2" and then "1"

3. To start program play, select Play on the menu or press Program button again to exit without program play.
4. To change programmed items, scroll the navigation button to the item to be changed and enter the desired track number, the selected item will be changed.
5. You can also cancel the program mode by clearing all the items in the program menu.

### **Zoom Play**

Press the Zoom key continuously to zoom in the picture by 2, 3, and 4 times, zoom out by 1/2, 1/3, 1/4, and normal size. Press this key once more when the picture is at 1/4 size to return to the normal size display. Scroll to view the enlarged picture using one of the Navigation buttons.

### **On Screen Display Information**

When the Boombox is playing, press the Display button continuously on the remote control. The screen will display the information (current disc type, title number, chapter number, playtime, audio language, audio type and multi angle, etc) in a sequence.

### **Multi-Angle Viewing (DVD Only)**

Press and hold the Angle button during playback to display the number of angles being played and then select a desired angle to view the scene. Note: only the DVDs shot with multi-angle scenes have this function.

### **MP3/MPEG 4 Playback**

1. Load the MP3/MPEG 4 disc onto the disc tray and the TV screen will show all the folders after a few seconds.
2. Select the folder you want with one of the navigation buttons and click OK to confirm.

3. The files in this folder will be displayed. Select your favorite song with one of the navigation buttons and press the Ok button to start playback.
4. Press the Next and PREV button to select the track.
5. Press the Repeat button to change the play mode.

REPEAT 1 - repeat one file.

REPEAT DIR - repeat all tracks in the current album.

REPEAT ALL - repeat all tracks in current disc.

REPEAT OFF - cancel repeat modes.

### **Picture Playback**

Load the CD and the slide show will begin automatically. Your folders containing JPEG pictures will be displayed on the screen. Use one of the navigation buttons to select the desired folder and press the Ok button to confirm. The files in this folder are displayed and you can select your favorite picture using the Up/Down navigation buttons and press the Ok button to start the playback. Picture previews will be displayed when you scroll across the file names.

### **Picture CD Operations**

#### **1. Play modes**

Press the Repeat button during play to change the play modes.

REPEAT 1 - repeat one file.

REPEAT DIR - repeat all picture in the current album.

REPEAT ALL - repeat all pictures in current disc.

REPEAT OFF - cancel repeat modes.

During playback, press Stop to enter preview mode.

#### **2. Skip to the Next/Previous Picture**

Press the Next button to skip to the next picture or PREV button to the previous picture.

If no key is pressed for a few seconds, it will skip to the next picture automatically.

#### **3. Picture Rotations**

Press the Right/Left navigation buttons to rotate the picture clockwise or counter-clockwise.

#### **4. Picture Flips**

Press the Up button to flip the picture vertically. Press the Down button to flip the picture horizontally.

#### **5. Picture Zoom In/Out**

With each press of the Zoom button, the picture zooms in by 2, 3 and 4 times or zooms out by 1/2, 1/3, 1/4 the original size. Press this button once more and the picture will get smaller by 1/4 size and return to normal play. If the picture is enlarged, you may use one of the navigation buttons to view blocked parts of the picture.



#### 6. Slide Show Transitions Modes

During the slide show playback, press the Program button to select one of the following modes to play:

WIPE TOP  
WIPE BOTTOM  
WIPE L  
WIPE R  
DIAGONAL WIPE L TOP  
DIAGONAL WIPE R TOP  
DIAGONAL WIPE L BOTTOM  
DIAGONAL WIPE R BOTTOM  
EXTEND FROM CENTER H  
EXTEND FROM CENTER V  
COMPRESS TO CENTER H  
COMPRESS TO CENTER V  
WINDOW H  
WINDOW V  
WIPE FROM EDGE TO CENTER  
RANDOM  
NONE

#### Color and Brightness Adjustment (for the LCD Screen)

Press the Screen On/Off & COL/BRI button on the remote control to adjust the color intensity and brightness. Press the button once to enter the color adjustment mode and press the navigation Left/Right buttons to adjust. Press the button twice to enter the Brightness mode. Press and hold this button to close the screen.

#### External Memory Media Operation (USB)

Prepare the player for External Memory media operation:

1. Make sure the power is connected. Slide the Function switch to DVD/USB/CARD position. The Power indicator will light up. Press the USB/Card button on the remote control continuously until the player enters USB mode.
2. An icon of READ USB shows on the LCD. After the USB is successfully detected and read, the track number as a total shows in the LCD.
3. You may play the files stored in the storage media much in the same way as you do the MP3/MPEG 4 disc. OR Insert an MMC/SD card into the card slot. Press the USB/Card button on the main unit continuously until the player enters MMC/SD mode.

## Initial Settings

The Initial Settings page will allow you to customize your settings. Once the initial settings are complete, they are retained in the memory of the boombox until otherwise modified.

### Steps for the Initial Settings:

1. Press the Setup button.
2. Use one of the navigation buttons to select the item you want to modify. The setting page with further setting items displayed will show on the TV screen. Use one of the navigation buttons to make changes. Press the Ok button to confirm modifications.
3. Use one of the navigation buttons to switch to another setting on the main setting page.
4. Press the Setup button to exit main setting page.

### 1. System Setup

1.1 TV System - it is used to select the TV mode.

Options: NTSC, Auto

Please select this option as per your TV set.

1.2 LCD Mode - it is used to select the LCD mode.

Options: 4:3 16:9

1.3 TV Type - it is used to select the TV scan mode, please set as per your TV set.

Options: 4:3PS, Normal Pan & scan mode

4:3LB, Normal Letter box mode

16:9, 16:9 wide screen mode

1.4 Password - input password to unlock the system. The steps are as follows:

1.4.1 Enter the System Setup, select the Password item by scrolling with the Down button, and then press the right button to select the input box.

1.4.2 Input user's password "0000" to unlock it. Select the input box again to change the password and add another new four numeric number. Press the Ok button to confirm. When the password is changed, you need to input the new one to unlock the system.

1.4.3 If you forget your password, use the supervisor's password "8200".

Note: If the wrong password was input in the unlock status, the system will lock. Use 8200 to unlock it.

1.5 Rating - To change the rating of parental lock, input the password to unlock it first then choose one of the following options: 1-KID SAFE, 2-G, 3-PG, 4-PG 13, 5-PG-R, 6-R, 7-NC-17, 8-ADULT

1.6 Default - Reset to factory settings. Options: Restore



## 2. Video Setup

2.1 Brightness - to set the brightness for the display.

Options: 0, 2, 4, 6, 8, 10, 12

2.2 Contrast - to set the contrast effect for display.

Options: 0, 2, 4, 6, 8, 10, 12

2.3 Hue - to set the color impression for display.

Options: -6, -4, -2, 0, +2, +4, +6

2.4 Saturation - to set the saturation level for display.

Options: 0, 2, 4, 6, 8, 10, 12



## 4. Speaker Setup

4.1 DOWNMIX

Options: LT/RT- Left/Right mix mode

Stereo - Select this option if you don't have a 5.1 channels amplifier.



# Radio Operation

## Playing the Radio

- Slide the Function switch on the main unit to the Radio position. The Power indicator will light up.
- Select the desired band with the Band switch.
- Tune to the desired station by rotating the Tuning control. (Move the control back and forth until you get the strongest clearest sound.)
- The built-in AM antenna and external FM Telescopic Antenna are directional.
  - To receive an FM station, fully extend the Telescopic Antenna and angle it for the best reception.
  - For AM stations, rotate the whole set until the best reception is heard.
- Adjust the volume level to a comfortable listening level.
- To turn the radio off, slide the Function switch to the Off position.

Note: When external headphones/earphones are connected, the sound to the main speakers will be muted. Caution, listening at high volumes could damage your ears.

## Stereo Headphone Jack

A stereo headphone jack is located on the top of the unit. Plug in the headphones/earphones (not included) and adjust the Volume control to a comfortable listening level. If a particular FM Stereo station is weak, or you hear too much background noise, try moving the position of the band selector switch to the FM (MONO) position. This can often result in a much clearer reception. When the band selector switch is set to FM Stereo and a stereo station is being received, the FM Stereo indicator on the top of the unit will light up.

### Audio In

Your player can be used as a power amplifier to play back the programs from portable radio, TV set or MP3 player. This boombox has been designed so that the audio signal may be produced through a Line Out jack.

Observe the following steps to connect the player to another appliance:

1. Power the player on using the supplied power cord.
2. Slide the Function switch to the DVD/USB/Card position.
3. Connect the appliance into the player's Audio in socket with the supplied Line Out cable of the appliance.
4. Power on the appliance and begin play.

You will be able to hear the sound produced from the programs when the connected appliance is broadcasting.

### Disc Handling Precautions



Hold the disc by the edge so the surface will not be soiled with fingerprints. Fingerprints, dirt and scratches can cause skipping and distortion.



Do not write on the label side with a pen or other writing utensils.



Do not apply benzene, thinner and/or liquid that prevents against static electricity.



Be careful not to drop or bend the disc.



Install only one disc on the disc tray.

Do not try to close the disc tray when the disc is not installed properly.

Be sure to store the disc in its case when not in use.

## Troubleshooting

If your DVD player does not seem to be functioning properly, check the items below:

### **Power does not turn on or suddenly turns off.**

- Make sure the AC cord is securely plugged into an AC outlet.
- Turn the power off and then back on.

### **Remote control won't work.**

- Check the battery is inserted in and in the correct direction.
- The battery may be dead. Replace it with a new one.
- Check that the signal transmission is directed at the remote control sensor on the DVD player.
- Remove the obstacle between the remote controller and remote control sensor.

### **No picture or sound.**

- Check that the A/V cables are securely connected.
- Check that the disc is a DVD (region number 1 or all), DVD-RW or Audio CD.
- Do not use a disc that has scratches or dirt.
- Check that the label side of the disc is facing up.
- The pick-up lens of the DVD player may be dirty. Clean it with your favorite pick-up lens cleaner.
- Check that the TV channel is set to Video or AV if viewing with a TV.

### **No picture.**

- Check that the LCD display is turned on.

### **No sound.**

- Check that the display panel is open. If it is closed, there won't be any sound from the speakers.
- Check the volume setting. If set to zero, turn up volume level.
- Check that the headphones are plugged into the phone socket.

### **No picture and sound.**

- Check that the battery is properly installed and the AC Adapter is properly connected.

### **Distorted video or sound.**

- Use a disc without scratches or dents.

## Contact Information & Warranty

### Tech Support

Contact us at [www.ipsgproducts.com](http://www.ipsgproducts.com).

### One Year Limited Warranty

IPSG warrants this product to be free of defects in materials or workmanship. This warranty does not include damage resulting from accident or misuse. If this product should become defective, return to your place of purchase. This warranty is in lieu of all other warranties expressed or implied including the implied warranties of merchantability of fitness for a particular purpose, whether arising by law, custom or conduct, and the rights and remedies provided under this warranty are exclusive and in lieu of any other rights or remedies. In no event shall IPSG be liable for consequential damages.

